


2. Assembly

GT7DI - GreenTherm 7L Dry Ice

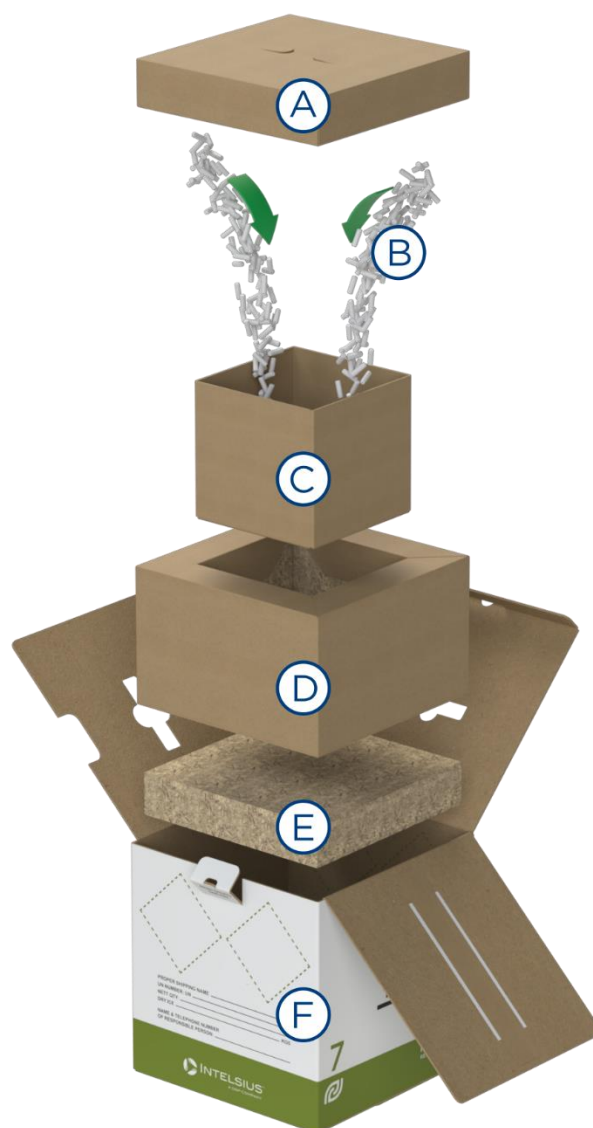

	Component	Quantity
A	Lid Cassette	1
B	Dry Ice	5.5 kg
C	Inner Liner	1
D	Wall Insulation Assembly	1
E	Base Insulation Panel	2
F	GreenTherm 7L Case	1

2.1 Packing Instructions

- 2.1.1 Pack the GreenTherm 7L System (F) with the front of the case closest to you.
- 2.1.2 Pour approximately 1kg of Dry Ice (B) into the GreenTherm 7L Inner Liner (C).
- 2.1.3 Place the payload on the dry ice in the centre of the system.
- 2.1.4 Pour the remaining 4.5kg of dry ice on top of the payload.
- 2.1.5 Place the GreenTherm 7L Lid Cassette (A) on the GreenTherm Wall Insulation Assembly (D).
- 2.1.6 The case lid can now be closed and secured. Your GreenTherm 7L Dry Ice is now ready to be shipped.