


Packing Instruction - PHT021 15-25 Configuration

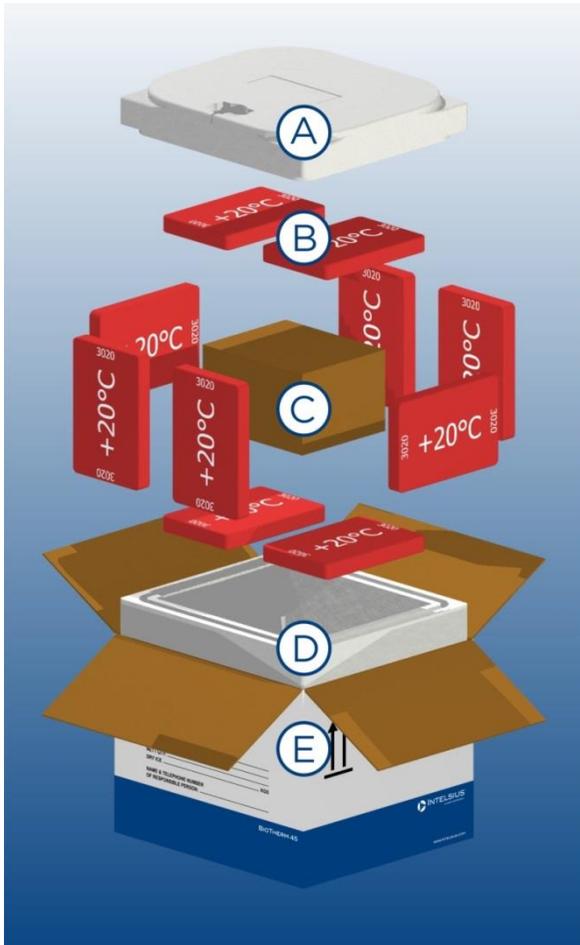

| Ref. | Component | Qty |
|------|--------------------------|-----|
| A | EPS45 Insulation Lid | 1 |
| B | Ambient PharmaChill 3020 | 10 |
| C | Payload | |
| D | EPS45 Insulation base | 1 |
| E | Outer Carton | 1 |

Assembly Instructions

Place two ambient PharmaChill 3020s (B) into the bottom of the EPS 45 Insulation Base (D).

Place payload in the centre of the insulation base.

Add one ambient PharmaChill 3020 horizontally to one short end of the payload carton.

Repeat this step for the second short side of the payload carton.

Place two ambient PharmaChill 3020s vertically on one of the long sides of the payload carton.

Repeat this step for the second long side of the payload carton.

Place the two remaining ambient PharmaChill 3020s on top of the payload carton.

Place the EPS45 lid (A) on top such that the gasket engages.

Close and seal the PT45 Outer Carton (E).

The system is now ready to be shipped.

Conditioning Instructions

Ambient PharmaChills should be conditioned at +20 °C for a minimum of 24 hours before use and to ensure they have come into thermal equilibrium with the +20 °C environment.

A conditioning guide or bespoke advice are available, please contact Intelsius for further details.