


## PharmaTherm 30 Dry Ice Packing Instruction

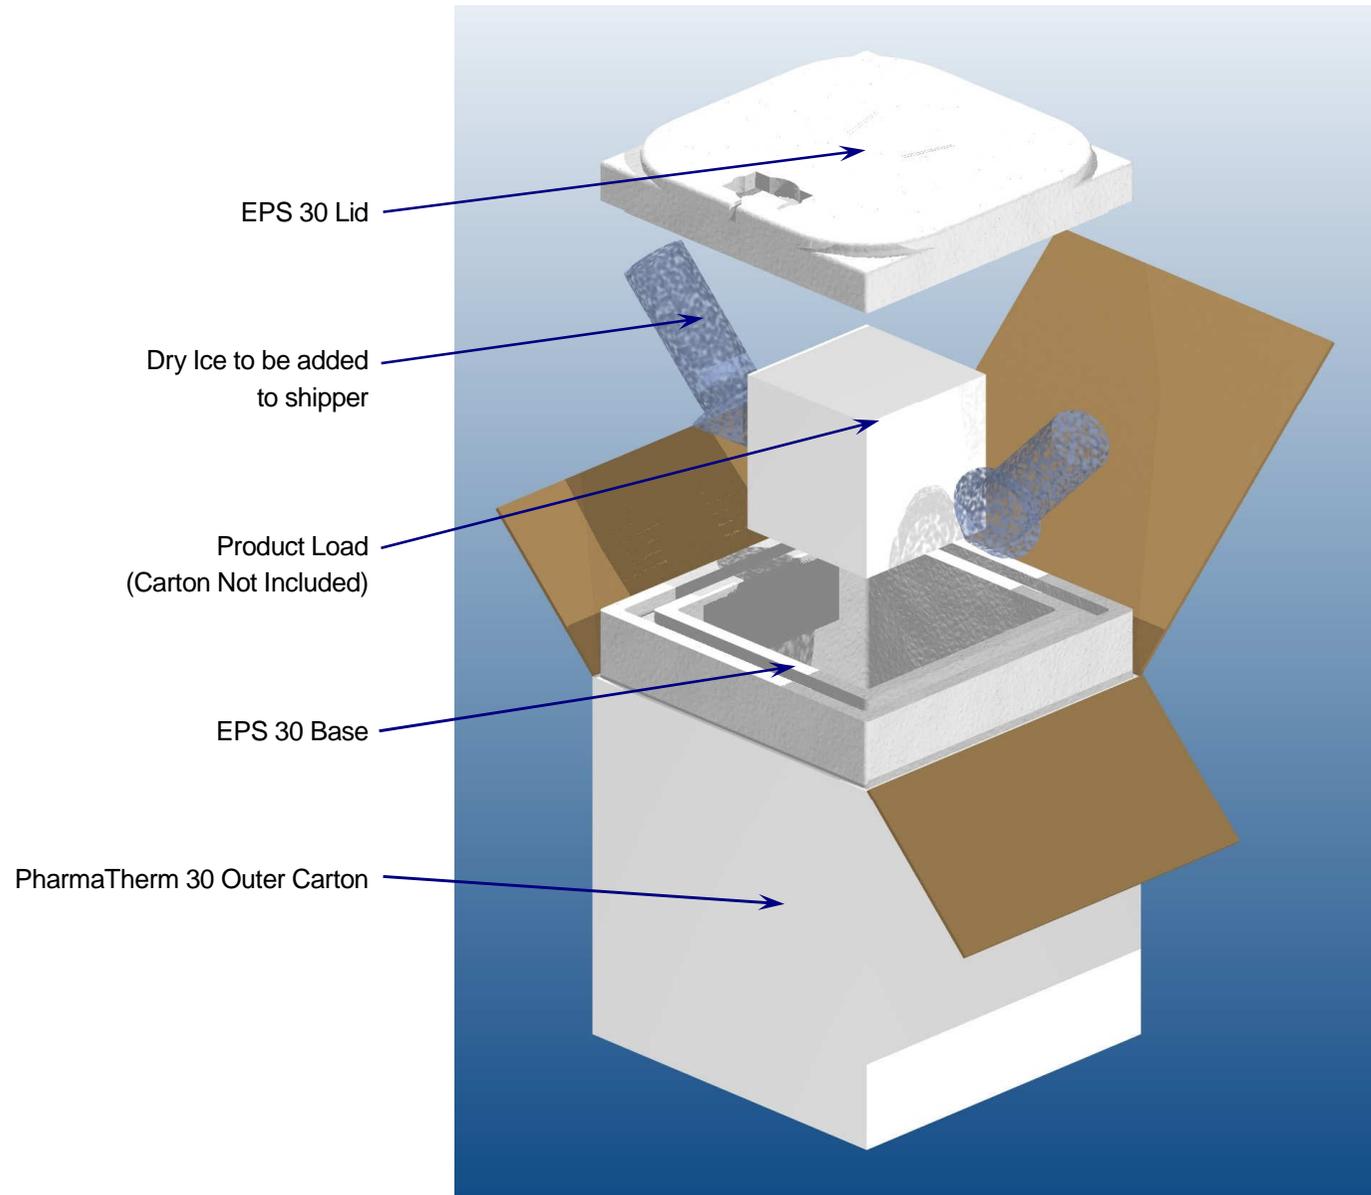

### **Caution**

Please observe all appropriate local safety precautions when handling and dispensing Dry Ice (Solid CO<sub>2</sub>)

### **Assembly Instructions**

Place the Product Load into the centre of the EPS 30 base. Fill the EPS 30 base to the top with Dry Ice (Solid CO<sub>2</sub>) pellets.

Apply the EPS 30 lid, then close and seal the Outer Carton. The system is now ready to be shipped.