


PharmaTherm 80 Dry Ice Packing Instruction

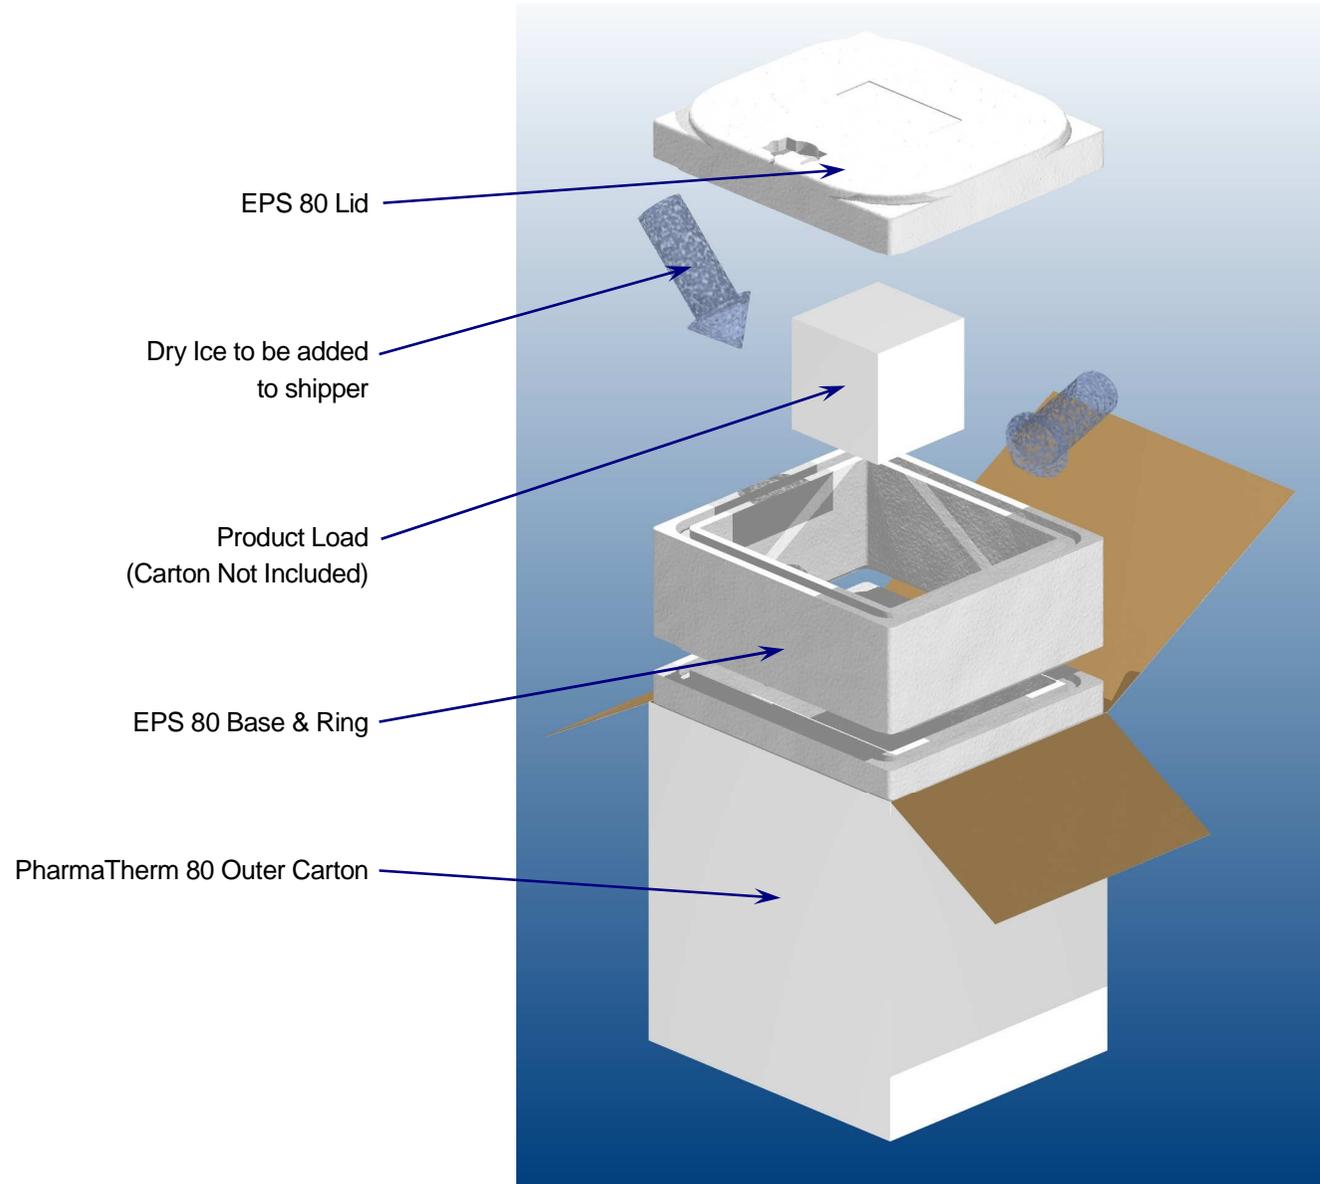

Caution

Please observe all appropriate local safety precautions when handling and dispensing Dry Ice (Solid CO₂)

Assembly Instructions

Place the Product Load into the centre of the EPS 80 Base. Fill the EPS 80 Base to the top with Dry Ice (Solid CO₂) pellets.

Apply the EPS 80 Lid, then close and seal the Outer Carton. The system is now ready to be shipped.