


CRT (15-25) 152L Packing Instructions

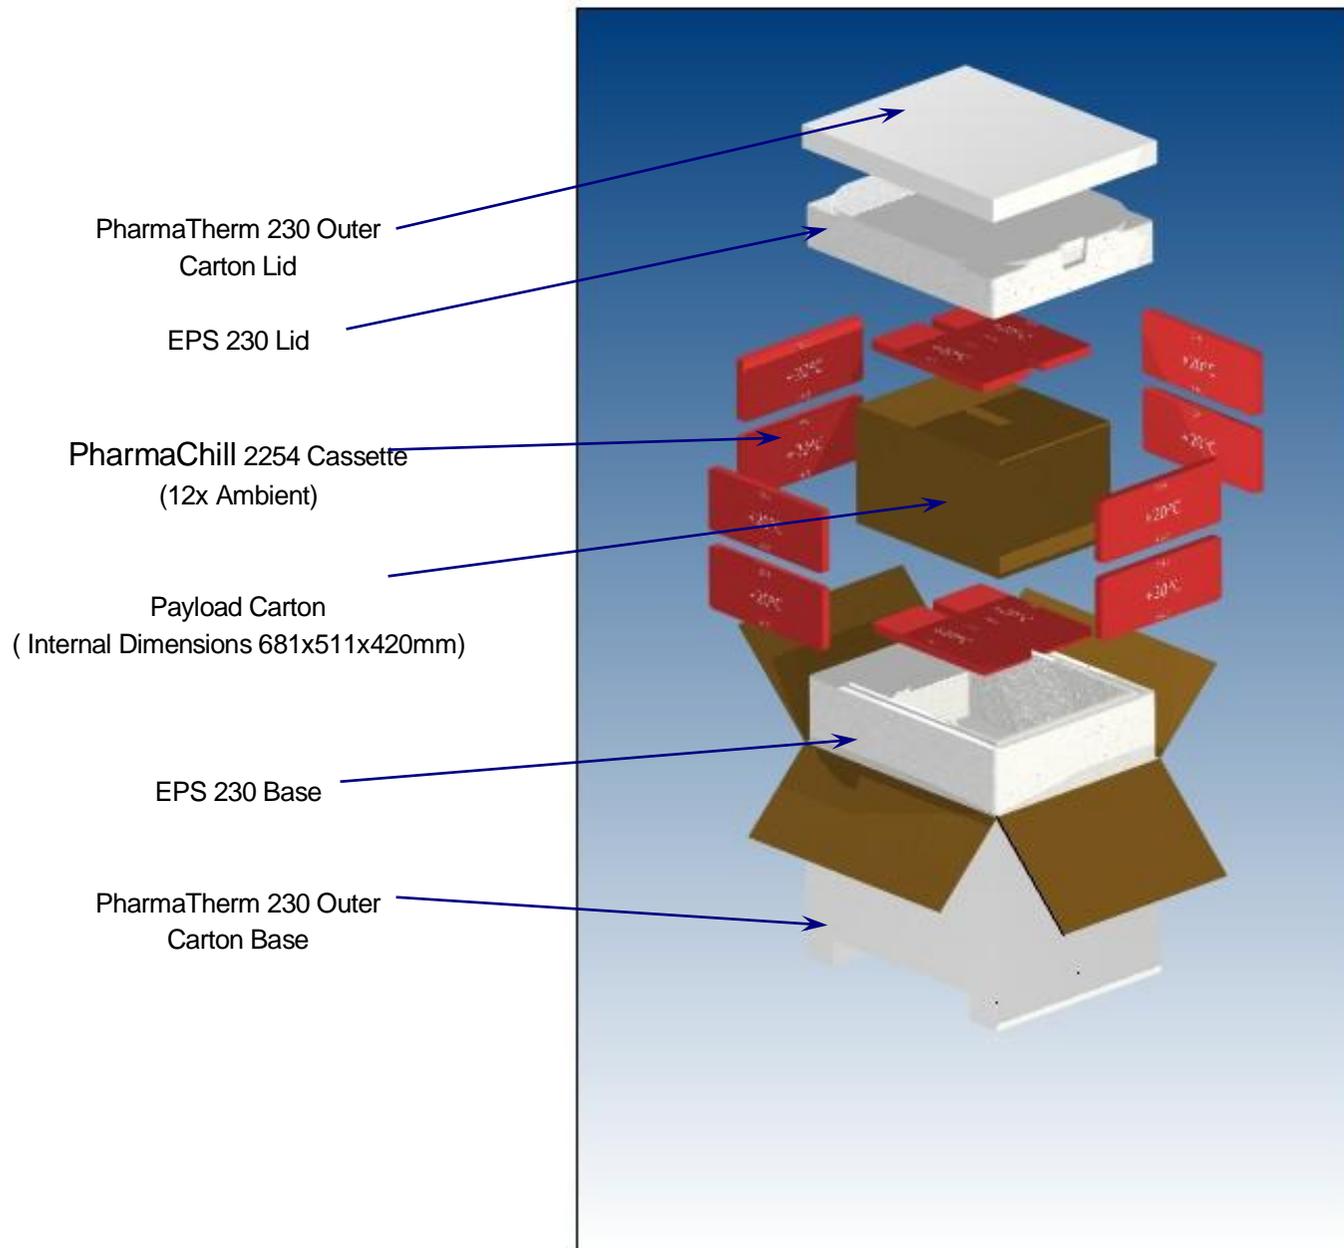

Assembly Instructions

Prepare twelve PharmaChill 2254 cassettes by conditioning them at +20°C for a minimum of 24 hours.

Once the PharmaChill are fully conditioned, place two PharmaChill 2254s into the centre of the EPS 230 base, and add the payload directly on top.

Next add two PharmaChill 2254s against each side of the payload, orientated as pictured. Next stack the remaining two PharmaChill 2254 on top of the payload.

Finally apply the EPS 230 Lid, then apply the Outer Carton Lid. The system is now ready to be shipped.