


PharmaTherm 15 Dry Ice Packing Instruction

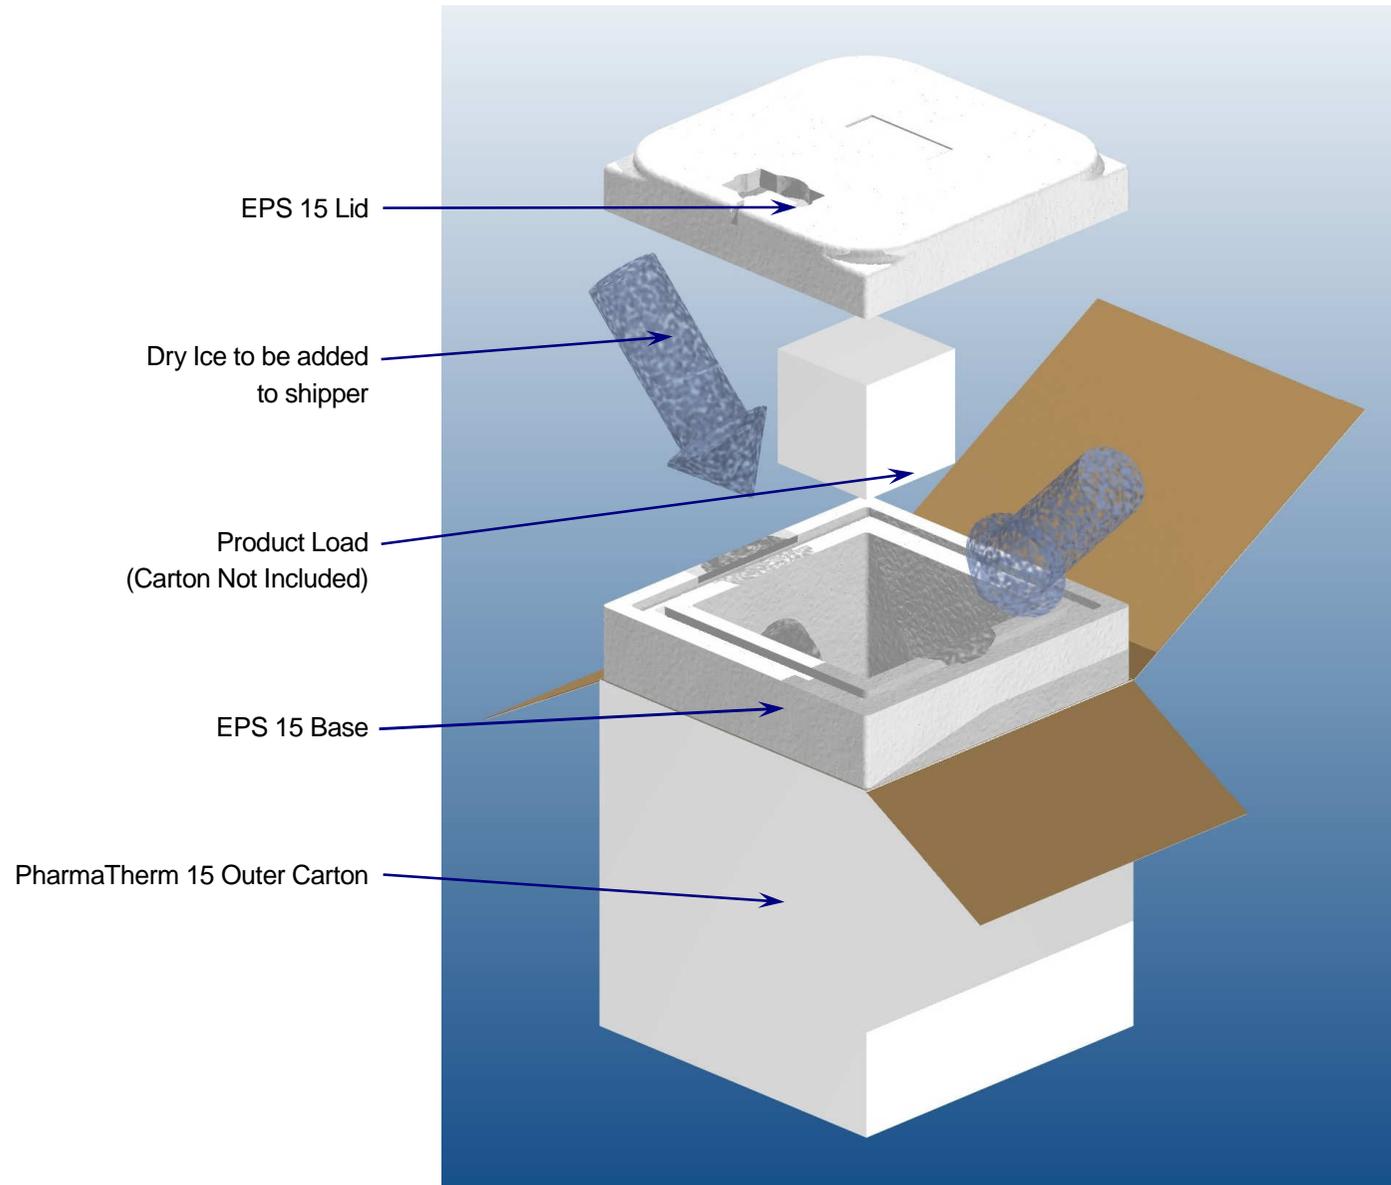

Caution

Please observe all appropriate local safety precautions when handling and dispensing Dry Ice (Solid CO₂)

Assembly Instructions

Place the Product Load into the centre of the EPS 15 base. Fill the EPS 15 base to the top with Dry Ice (Solid CO₂) pellets.

Apply the EPS 15 lid, then close and seal the Outer Carton. The system is now ready to be shipped.