


BT (2-8) 4.9L HY Pharmachill Packing Instructions

Summer System

Winter System

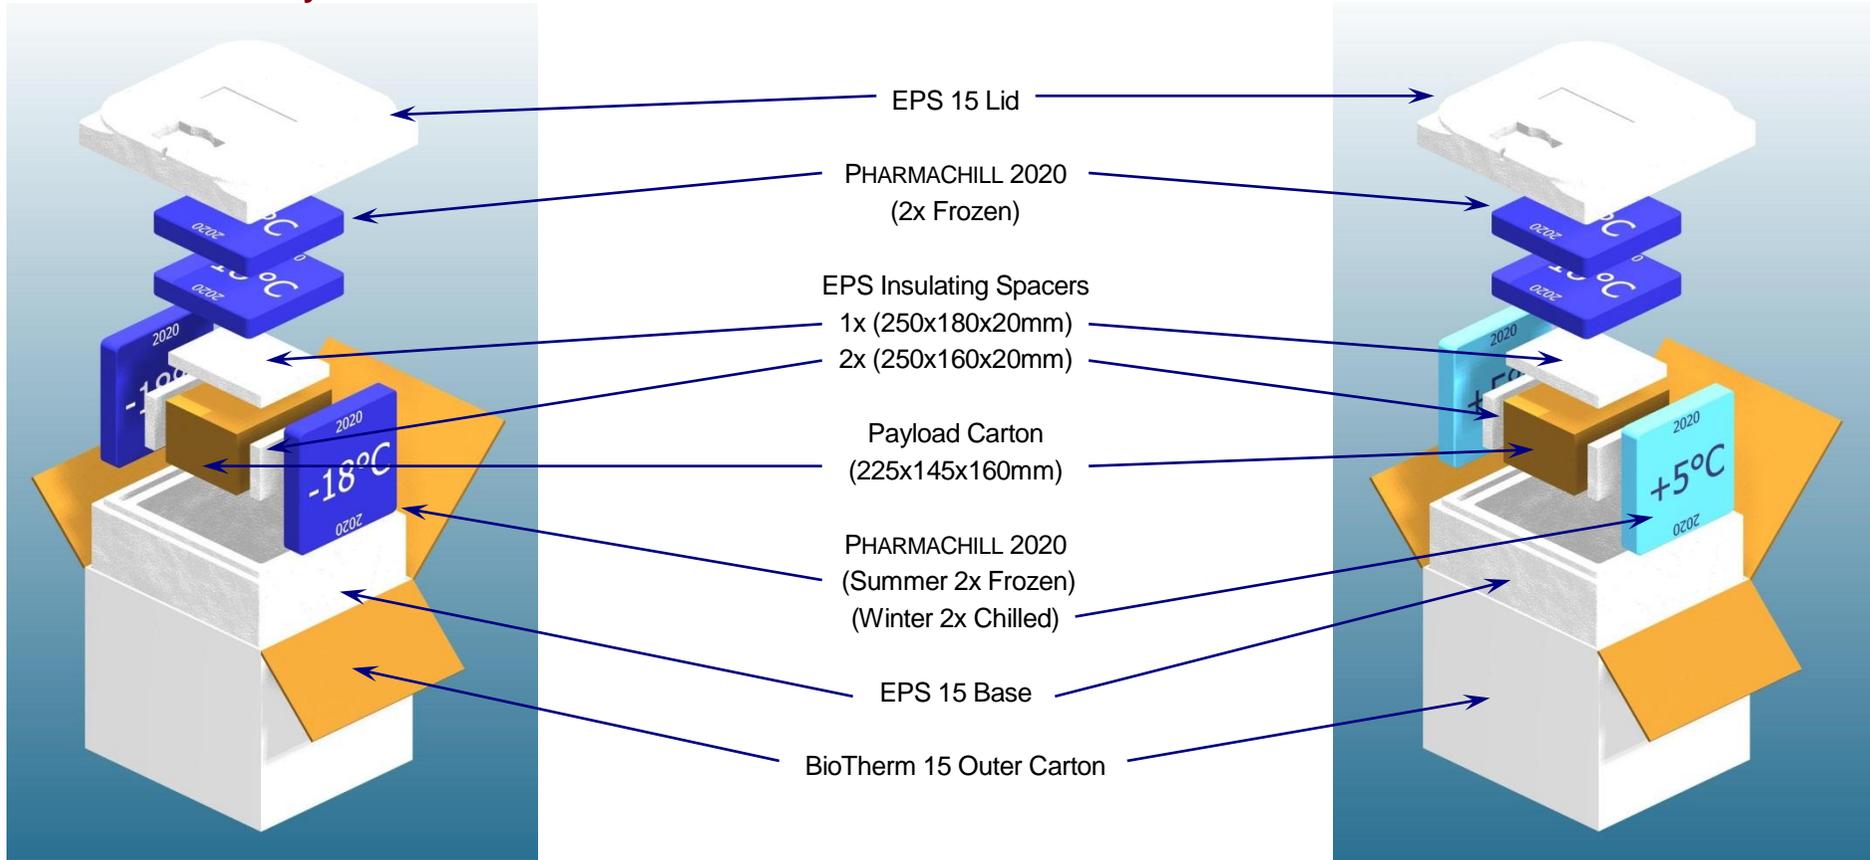

Chilled PHARMACHILLS should be conditioned at +5°C for a minimum of 24 hours before use. Frozen PHARMACHILLS should be conditioned at -18°C for a minimum of 24 hours and then for approximately 20 to 30 minutes at factory ambient +20°C (± 5) before system assembly.

Assembly Instructions

Place the product inside the payload carton and position in the centre of the EPS 15 base. Place the two side insulating spacers next to the longer sides of the payload carton. In the summer system place two frozen PHARMACHILL 2020s next to these insulating spacers. In the winter system place two chilled PHARMACHILL 2020s next to these insulating spacers. Now place a top spacer on top of the payload carton and place the remaining frozen PHARMACHILL 2020s on top, as shown in the above diagrams. Apply the box lid and close the outer carton. The system is now ready to be shipped.