


PHT034P Packing Instruction - PHT375B 15-25 CRT 180L 96

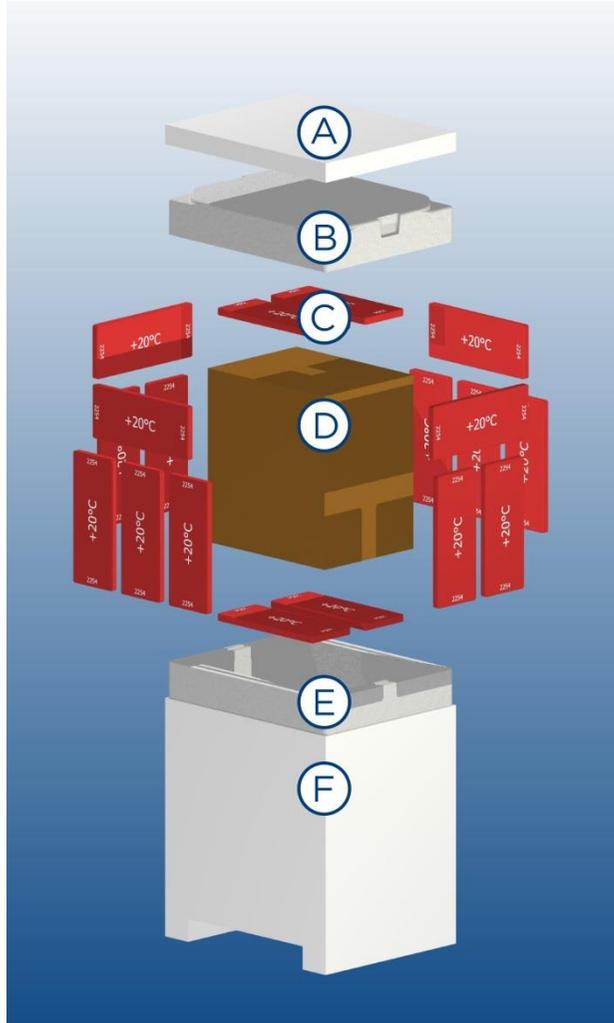

Ref.	Component	Qty
A	Outer Carton Lid	1
B	EPS230/375 Lid	1
C	Ambient PharmaChill 2254 Cassette	18
D	Payload Carton	3
E	EPS375 Insulated base (base and two rings)	1
F	Outer Carton	1

Assembly Instructions

Remove carton and system lids (A) and (B)

Fold down one side of outer carton (F)

Remove one EPS ring from insulated base (E)

Insert two ambient PharmaChill 2254 Cassettes (C) in to base of the system (E)

Place payload carton (D) directly on top of the cassettes. Place payload into the payload carton and seal.

Add the EPS ring back onto the insulated base (E) ensure gasket fit between layers. On the shortest sides of the EPS base (E), insert two ambient PharmaChill 2254 Cassettes (C) vertically and one cassette directly on top of them orientated horizontally.

On the longest sides of the EPS base, insert three ambient PharmaChill Cassettes vertically and one cassette directly on top of them orientated horizontally.

Place the remaining two ambient PharmaChill 2254 Cassettes on top of the payload carton.

Fold up the side of the outer carton (F), apply the EPS230/375 lid (B).

Secure outer carton lid (A) and seal.

Your system is now ready to be shipped.

Conditioning Instructions

Ambient PharmaChill Cassettes should be conditioned a +20°C for a minimum of 24 hours. Once stored for the appropriate time pack your system immediately.

A conditioning guide or bespoke advice are available, please contact Intelsius for further details.