


## **BIOCARRIER 4 2-8°C Packing Instructions**

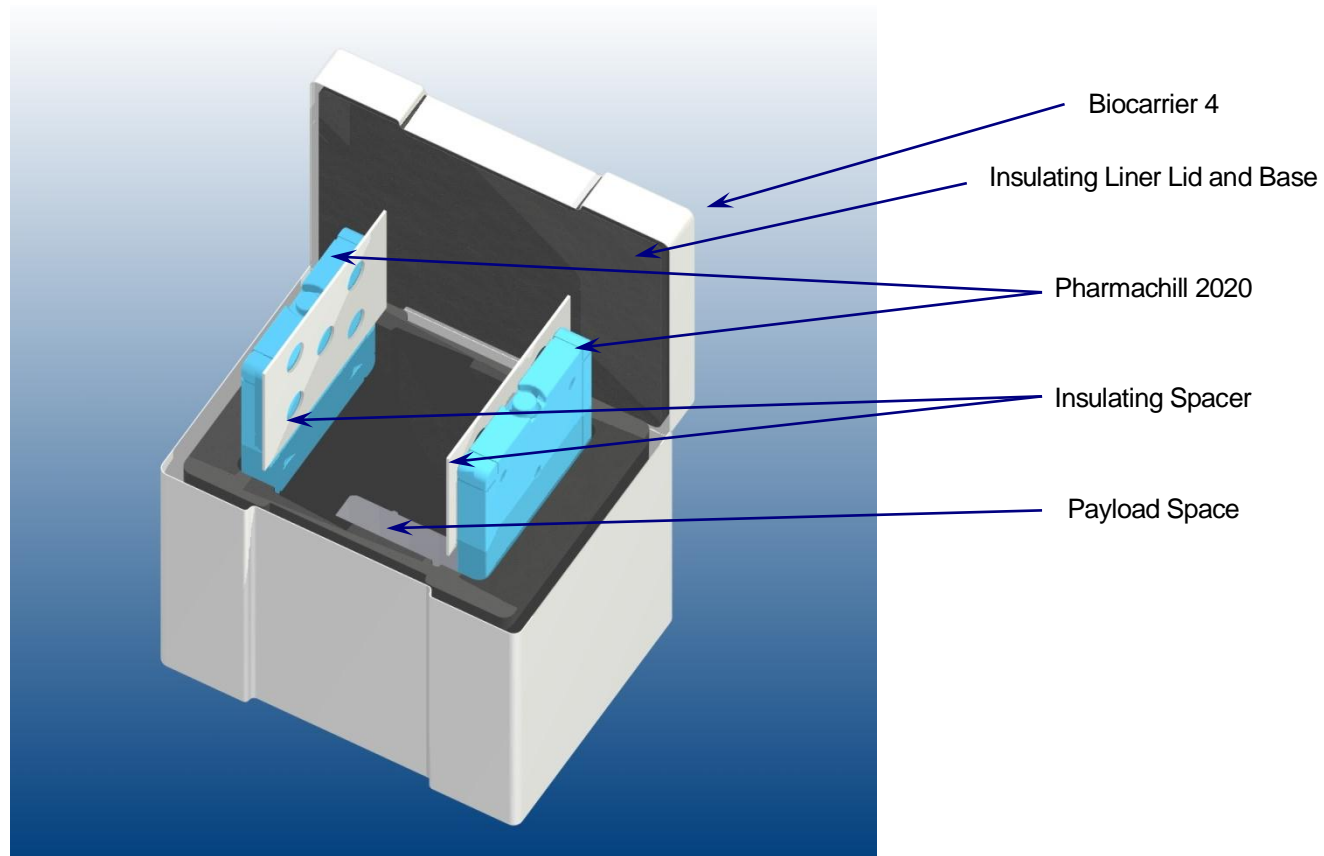


### **Assembly Instructions**

Frozen PHARMACHILL 2020s should be conditioned at -20°C for a minimum of 24 hours and then for approximately 20 minutes at factory ambient +20°C (± 5) before system assembly.

Place one PHARMACHILL 2020 down the outside of the insulating spacers as illustrated above. Close and secure the system for transport. Place refrigerated material in suitable secondary packagings within the payload space illustrated above.

## **BIOCARRIER 4 15-25°C Packing Instructions**

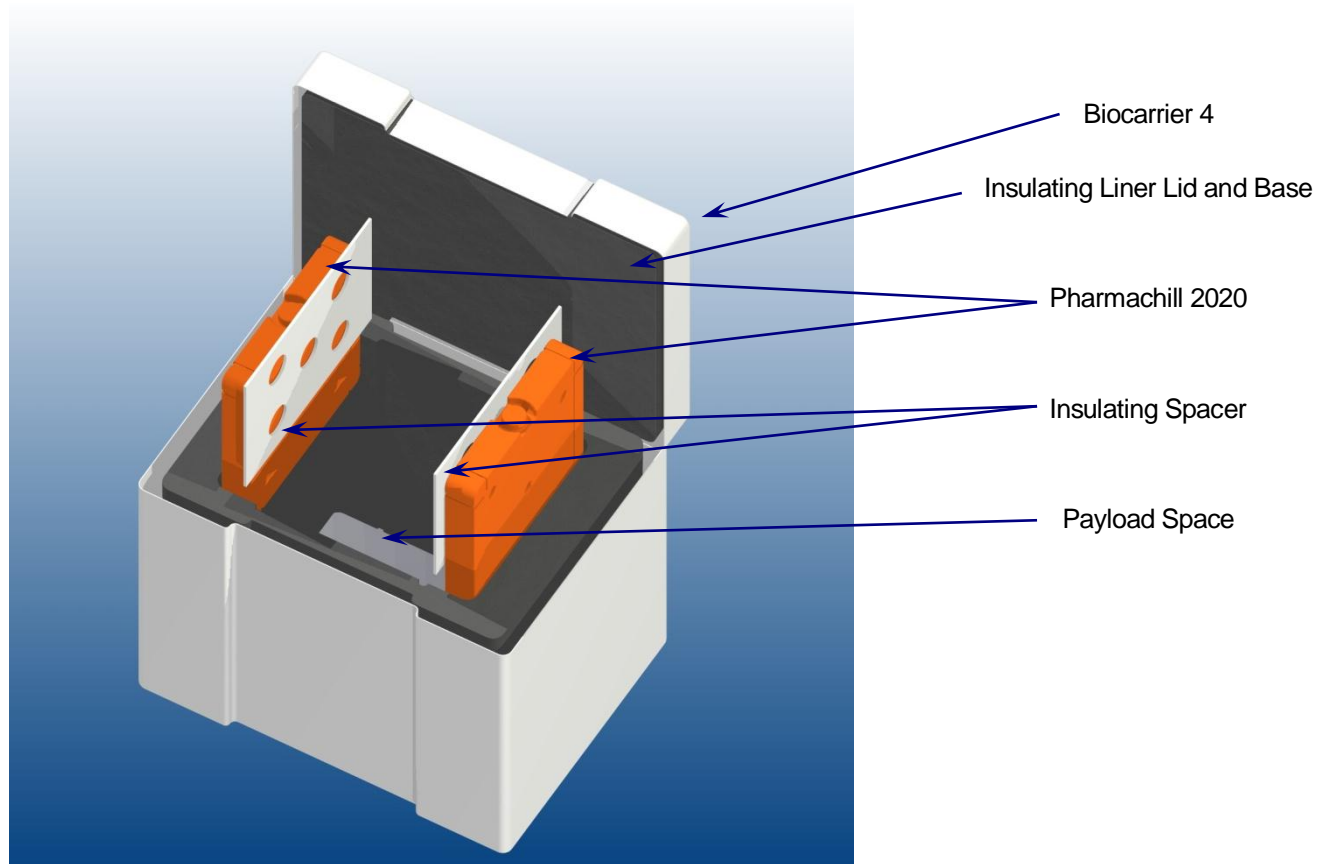

### **Assembly Instructions**

PHARMACHILL 2020s should be conditioned at +20°C ( $\pm$  5) for a minimum of 12 hours before system assembly.

Place one PHARMACHILL 2020 down the outside of the insulating spacers as illustrated above. Close and secure the system for transport.

Place material for transport in suitable secondary packagings within the payload space illustrated above.