


## BT (2-8) 12L HS/HW Packing Instructions

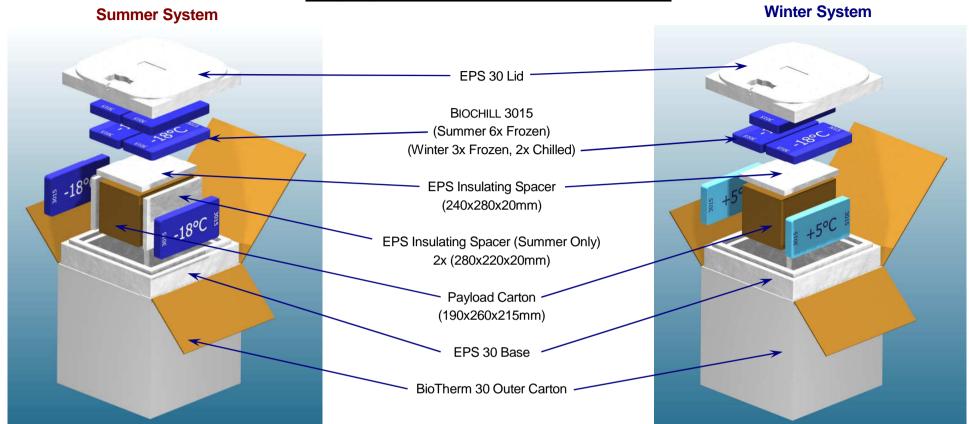

Chilled BIOCHILLs should be conditioned at +5℃ for a minimum of 24 hours before use. Frozen BIOCHILLs should be conditioned at -18℃ for a minimum of 24 hours and then for approximately 20 to 30 minutes at factory ambient +20℃ (± 5) before system assembly.

## **Assembly Instructions**

Place the product inside the payload carton and position in the centre of the EPS 30 base. For a summer system add a small insulating spacer and a frozen BIOCHILL 3015 down each side of the payload carton, ensuring the spacer separates the BIOCHILL from the payload carton. For a winter system add a chill BIOCHILL 3015 down each side of the payload carton. Then add the large EPS insulating spacer to the top of the payload carton. For a summer system add the four remaining frozen BIOCHILL 3015s to the top of the large insulating spacer, as shown in the diagram. For a winter system add three frozen BIOCHILL 3015s on top of the large insulating spacer as pictured. Finally apply the EPS 30 lid, close the BioTherm 30 carton and seal securely. The system is now ready to be shipped.

