


Extreme Exposure System 3 Packing Instructions

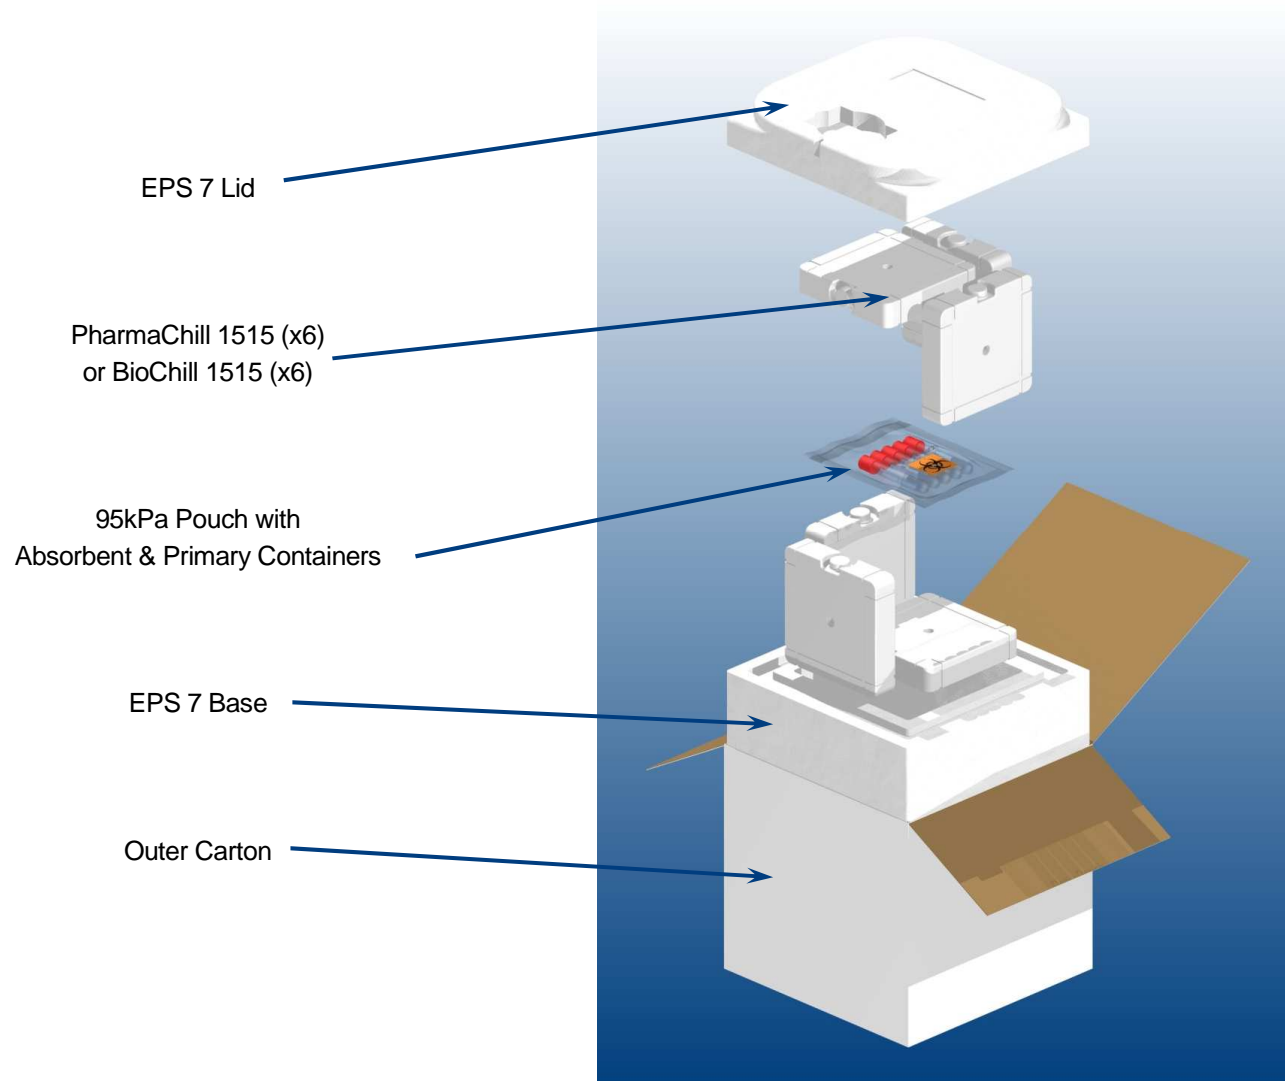

Assembly Instructions

Ensure the payload and PharmaChill or BioChills are at room temperature before assembly. Using a chilled payload, PharmaChills or BioChills will reduce the system performance considerably.

Position three PharmaChills or BioChills in the EPS 7 Base, arranged as pictured.

Place the payload into the system, and surround it with the remaining PharmaChills or BioChills forming a cube.

Apply the EPS 7 Lid, close the Outer Carton around the system and secure. The system is now ready for shipping.